


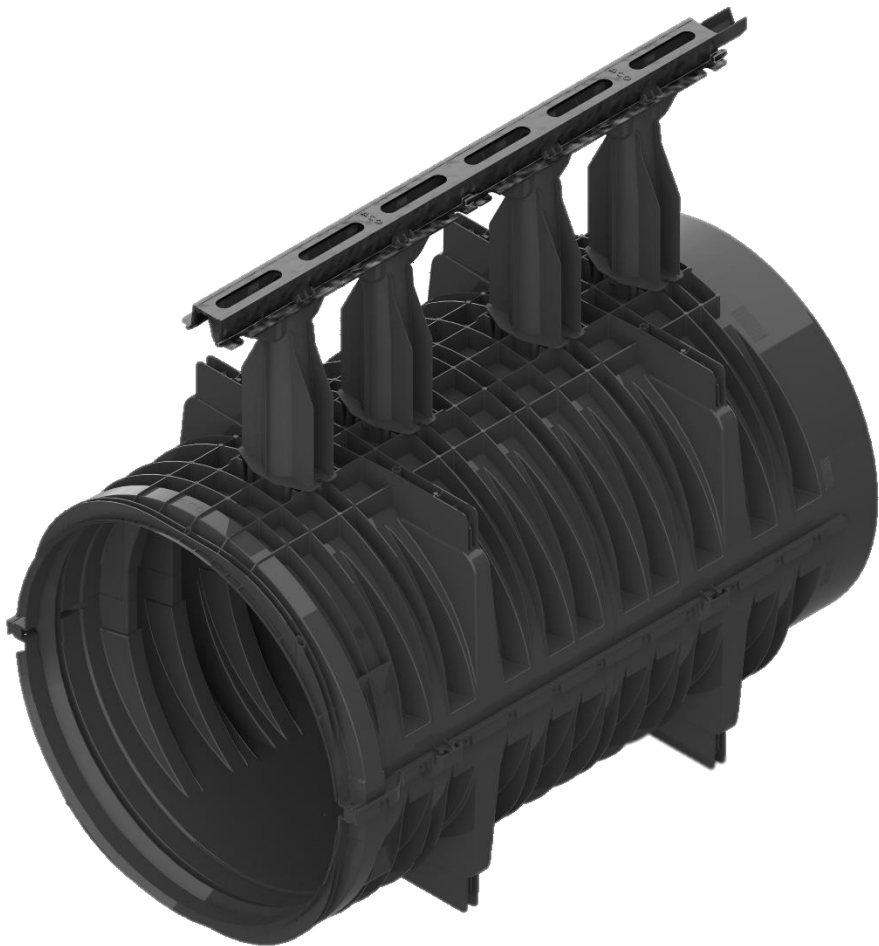

ACO Qmax Neo

Assembly guide



How to assemble


Qmax Neo 600 Step by Step

Item ID: 1178526



2x157411 (2037064)


2x157406 (3006251)

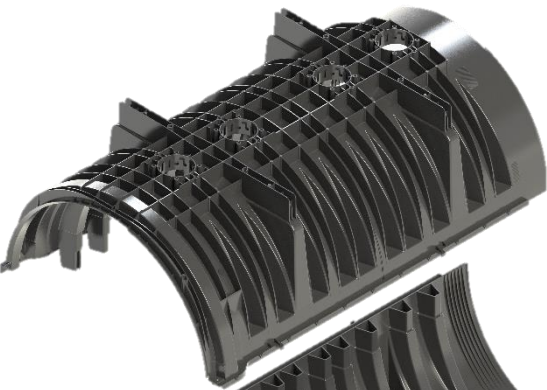

157302 (3005282)



157301 (3005281)

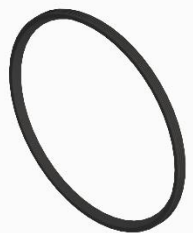


3006252

Qmax NEO 600

Parts for variant with
Qmax NEO 600 with QFlow cast
iron rail 0.5 m with long inlet
element


1.1

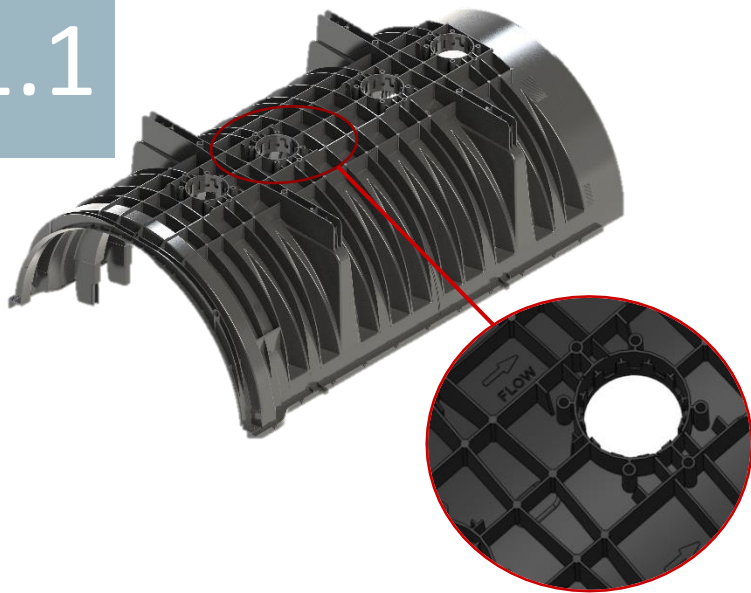

Main body


157301 + 157302

Before joining mind the flow direction

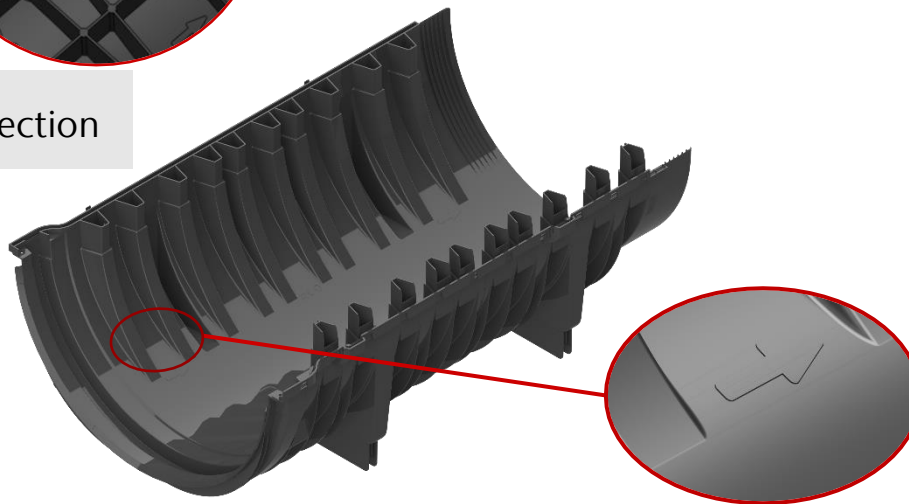

1.2

Press on both sides separately down

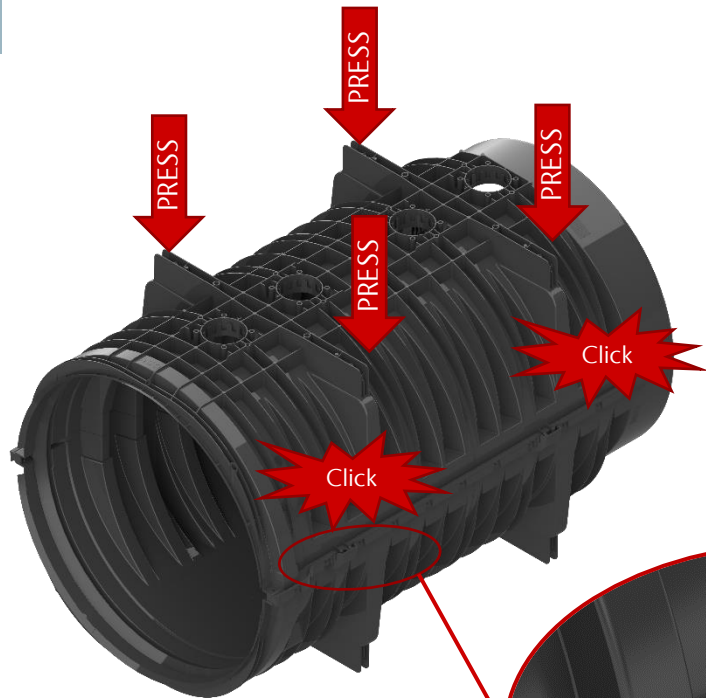

Main body


157301 + 157302



While joining mind the clip snaps




2

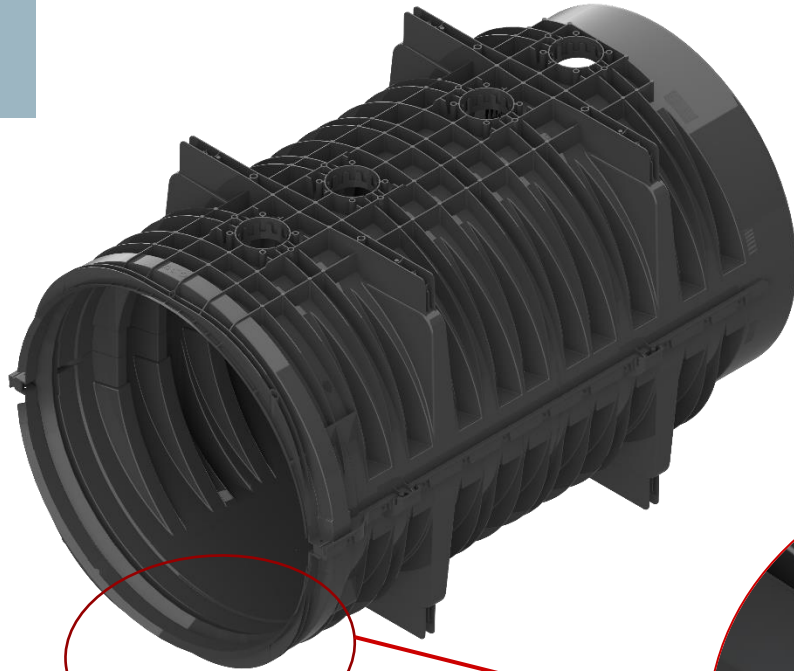


Assembling gasket

3006252

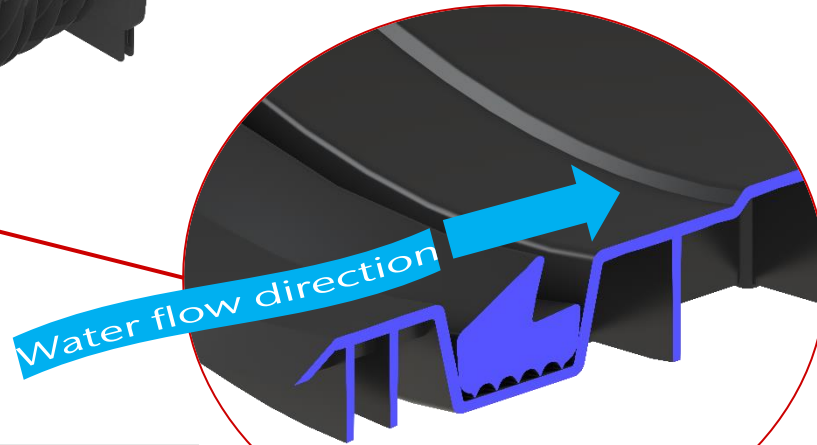

Mind the lip direction PNo: 3006252

3

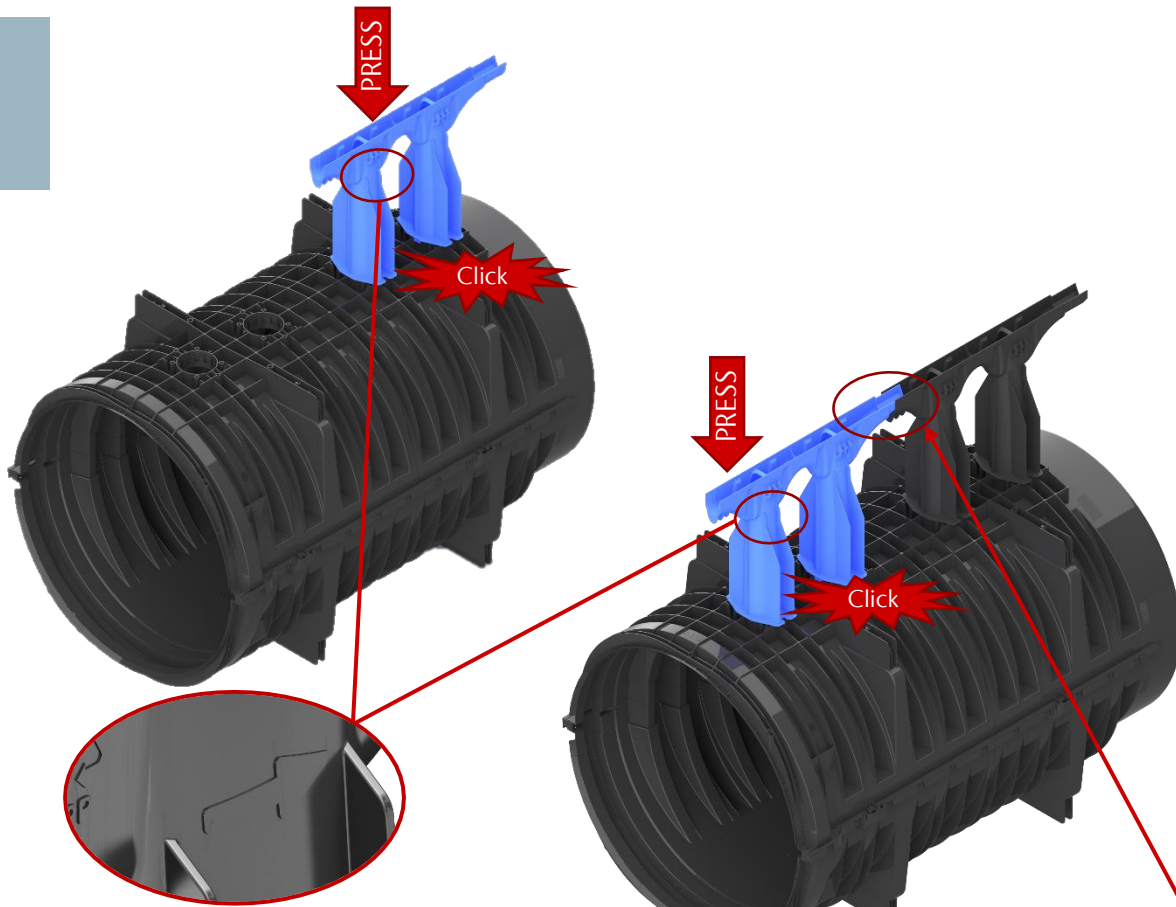

Assembling inlet


2x157406

Before joining mind
the flow direction

Make sure of clip
snap sound

Mind this area connection
for proper snapping


4

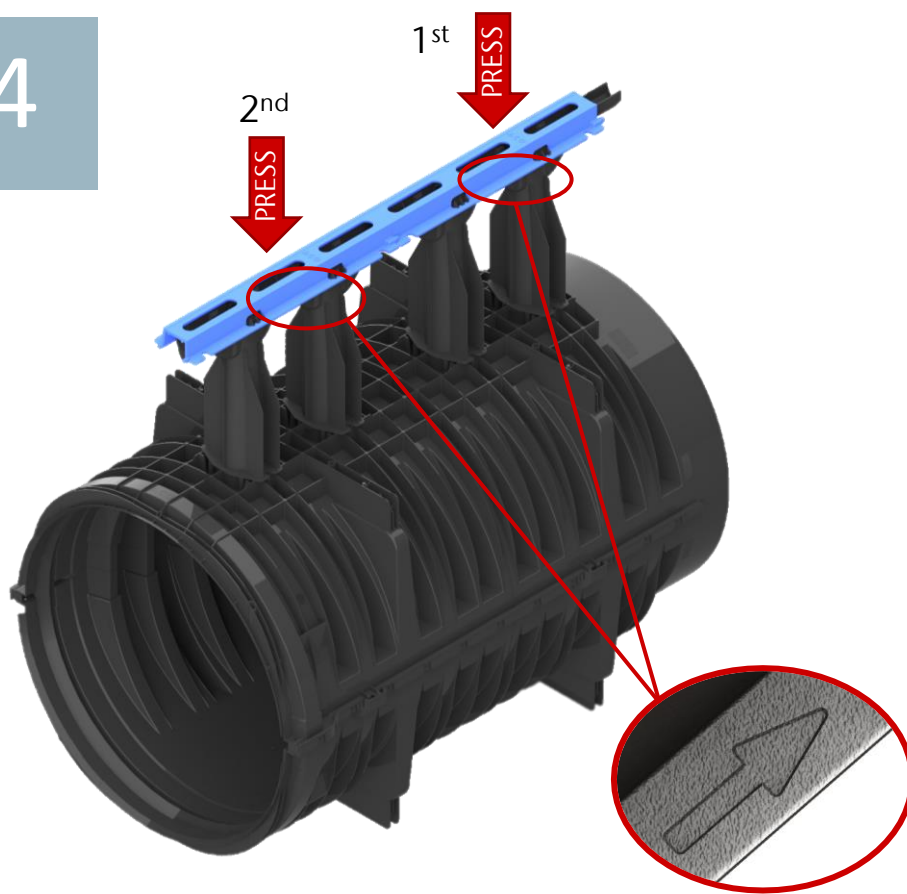

Before joining mind
the flow direction

Assembling cast iron rail

2x157411

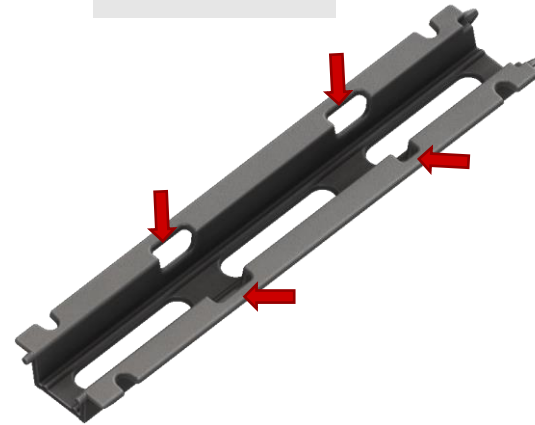

Apply lubricant on clip
contact surfaces in case of
difficulty in assembling

5



Final assembly

Item ID: 1178526